Bambu Lab H2S AMS Combo Quick Start Guide

Please review the entire guide before using the product.

Safety notice: 1. Do not connect to power until the assembly is complete.

2. Two or more people are needed to carry the printer due to its heavy weight.



PF003-S | SA007



Video Guide

Scan the QR code to watch a step-by-step video and get started quickly.

bambulab.com/h2s-quick-start



Download Bambu Handy and Bambu Studio

Scan the QR code to download Bambu Handy, or visit the link below to download Bambu Studio. You can remotely control your printer and monitor your prints in real time on both your phone or computer.

bambulab.com/download



Explore more cool models

Scan the QR code to visit MakerWorld, our models community, where you can find a variety of free models, and quickly bring your ideas to life using the creativity tools in MakerLab and accessories in Maker's Supply.



Get help


Scan the QR code to visit our support center, contact technical support, and access more useful tutorials.

bambulab.com/support





To ensure safety and optimal performance, please follow these guidelines:

- Verify that the printer's operating voltage matches the specified requirements to avoid damage or safety hazards. This can be checked on the label next to the power socket.
 Refer to the "Specifications" section for details.
- Regular maintenance is essential to keep the printer's complex mechanisms running smoothly. For guidance, see the "Regular Maintenance" section.
- For best results, we recommend using Bambu filaments, which have been rigorously tested for compatibility, safety, and stability with the the product.
- To prevent the filament getting stuck, do not print flexible filaments such as TPU with a hardness level that is or below 95A or damp PVA or BVOH with the AMS 2 Pro.
- The AMS 2 Pro supports a spool width between 50 mm to 68 mm and a diameter between 197 mm to 202 mm. We recommend using plastic spools.
- You can use the drying function of the AMS 2 Pro using only a 6-pin cable to connect it to an H2 series printer. If you need to dry filaments in multiple AMS 2 Pro units, you need to purchase official Bambu Lab power adapters to power the drying function of the other AMS 2 Pro units.
- During the filament drying process, the AMS 2 Pro removes moisture through external air circulation via the air inlets. Please ensure the air intake and vent are not blocked, to ensure optimum drying efficiency.

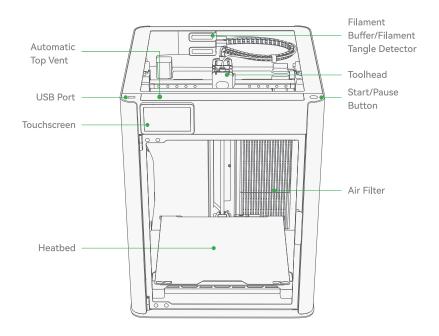


Printer component introduction

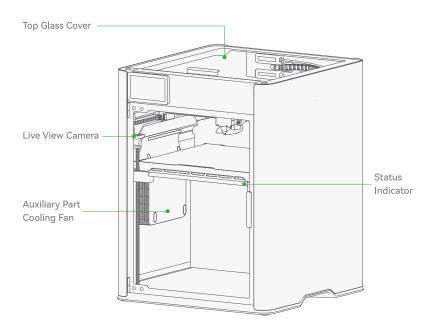


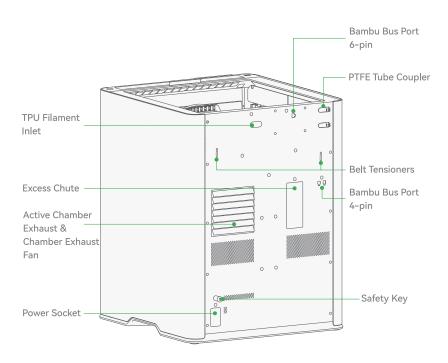

Toolhead component introduction

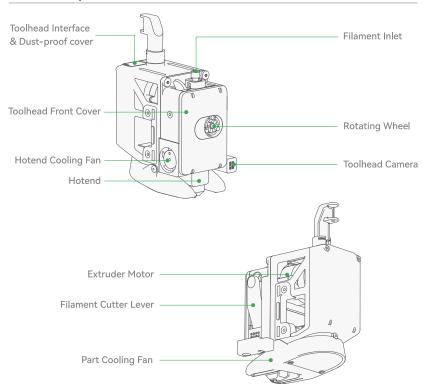

AMS 2 Pro component introduction

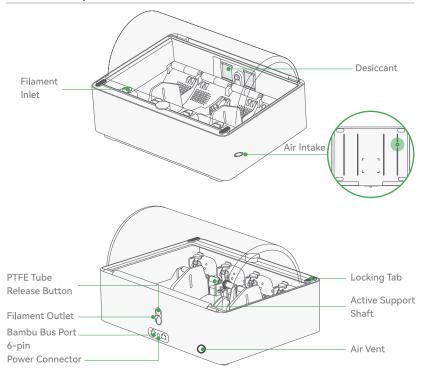

Included accessories



Spool Holder



Filament Cutter



Wiping Pad



Nozzle Wiper



Power Cord



Bambu Bus Cable 6-pin



Allen Key H1.5 Allen Key H2.0



Unclogging Pin



Desiccant



PTFE Tube



Safety Key




Build Plate (Pre-installed on heatbed)



Lubricant Grease & Lubricant Oil




Scraper Blade

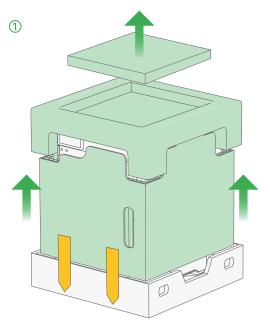


Take out the accessory box, and remove the surrounding cardboard, foam and tape.

Remove the package

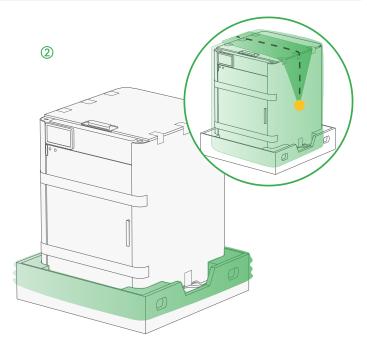


Remove the stickers from the sides and top opening of the moisture-proof bag. Then, pull the bag downward and fold it over all four corners of the bottom cardboard.

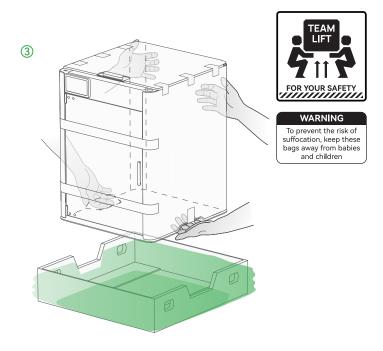


As shown in the picture, ensure the bottom cardboard stays in place. With two people, carefully lift the printer out of the cardboard and moisture-proof bag, and place it on a stable surface.


Remove the package

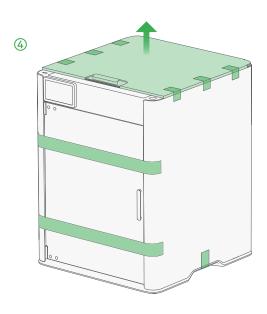


Remove the adhesive tapes and other packaging materials, then take out the top glass cover and set it aside.

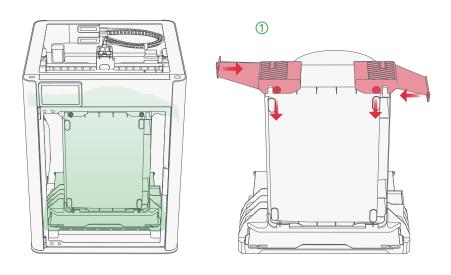


Use the longer H2.0 allen key from the accessory box to remove the 4 screws marked in red. Next, detach the two plastic parts from the top.

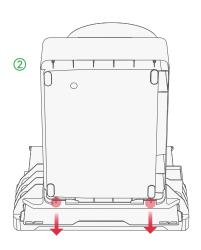


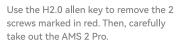



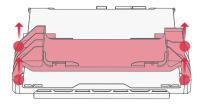


Use the H2.0 allen key to remove the 4 screws marked in red. Then, take out the fixture and the nearby foam (except the foam under the heatbed, which should be removed after calibration).

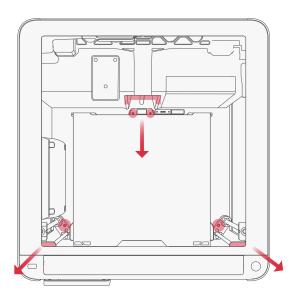

Use the H2.0 allen key to remove the 4 screws marked in red, and then remove the foams marked in red securing the lead screws.


The foam under the heatbed should be removed after calibration.

Unlock the toolhead

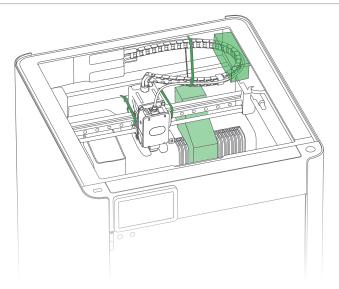


- ① Cut and remove all zip ties.
- ② Pull the toolhead towards the front door, and remove the foam pieces marked in green.
- 3 Remove other foam pieces and tapes marked for removal inside the chamber.


Install the AMS 2 Pro

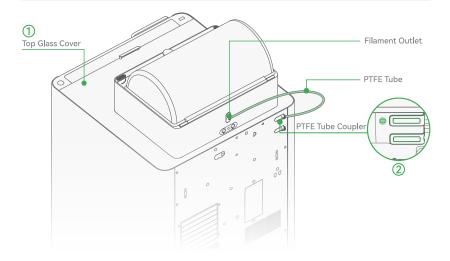


- 1) Place the top glass cover and AMS 2 Pro on top of the printer.
- ② Take out the PTFE tube from the accessory box, insert it into the AMS 2 Pro's filament outlet and the PTFE tube coupler of the printer, and push the tube forward for approximately 10 cm until it stops (if you can see the PTFE tube from the window next to the buffer from the front of the printer, it is correctly inserted).

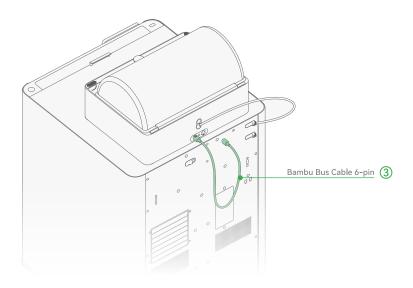

③ Connect the Bambu Bus Cable 6-pin to the printer and either 6-pin port of the AMS 2 Pro.

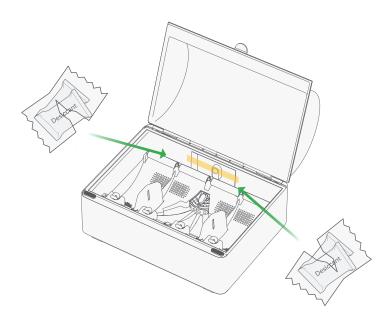


Remove the tape from the back of the AMS 2 Pro and take out the desiccant packs. Remove the outer plastic packaging material and install 2 packs of desiccant on each side of the empty space.

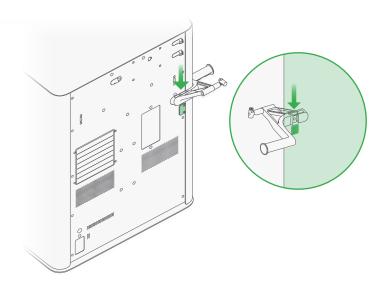


Take out the spool holder from the accessory box. Slide in the spool holder in the direction shown above.

Load filament from an external spool

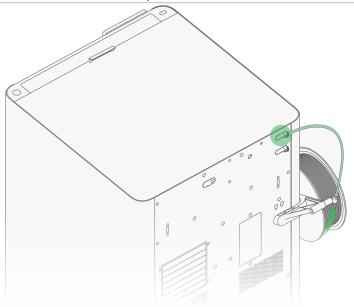


When the AMS 2 Pro is not used, you can feed filament from an external spool. Take out the shorter PTFE tube from the accessory box. Connect one end of the PTFE tube to the spool holder's PTFE tube coupler and the other end to the printer's coupler, pushing it in until it stops. Next, insert the filament into the PTFE tube and continue pushing until it enters the extruder and can no longer move forward.

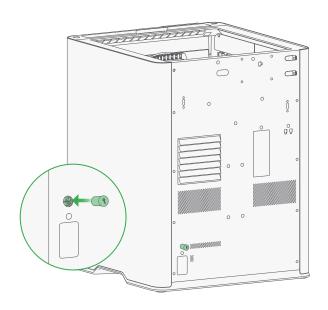

Take out the safety key on the rear panel, and insert it into the installation slot located above the power socket.

Please do not skip this step, as the printer cannot be powered on without it.

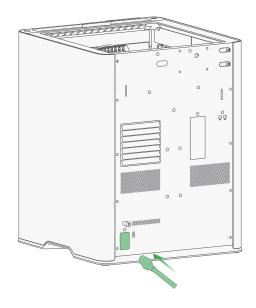

Plug the power cord in the power socket on the back. Then, turn on the power switch.


Bind the printer - Bambu Handy

Scan the QR code on the right to download Bambu
 Handy. Register and log in to your Bambu Lab account.



- 2. Follow the instructions on the screen until a QR code appears.
- 3. Scan the QR code on Bambu Handy to bind the printer to your Bambu Lab account



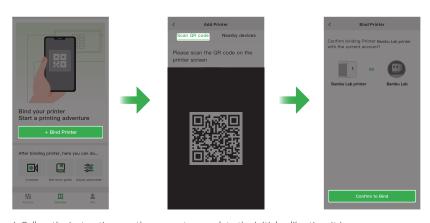

- 4. Follow the instructions on the screen to complete the initial calibration. It is normal to have vibration and noise during the process.
- * DO NOT remove the foam under the heatbed until calibration is complete.




 Connect both the computer and printer to the same wireless network, and do not use a guest network that has network device separation enabled.



 Click "+" on the device page, and Bambu Studio automatically discovers printers on the same network. Click the detected printer to bind it to your Bambu Lab account.



Visit the link below to download and install Bambu Studio. Register and log in to your Bambu Lab account.
 bambulab.com/download/studio

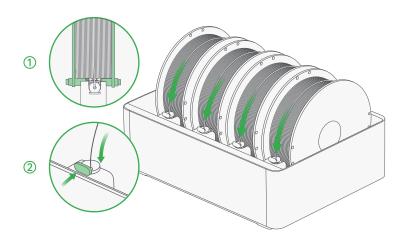

- ① Power on the printer and place a spool of filament in any of the four slots. Make sure the spool is correctly placed on the active support shaft as shown in the picture.
- ② Push the feeder tab towards the spool, and insert the filament. The AMS 2 Pro will pre-load it after it is detected. When the feeder LED light under the filament inlet is on, the AMS 2 Pro is ready to print.

(3)




Select 🛖 - Print Files, then select a model you wish to print.

* The textured PEI plate that comes with the printer is sensitive to dirt and oil. If you have touched the surface of the plate with your hands, oils from your hands can transfer to the surface and impact the plate's adhesion properties. It is recommended to wash it with hot water and detergent first to ensure the best adhesion.


After-print notes



Wait until the build plate fully cools down to remove prints.

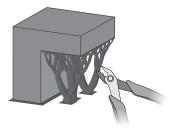

If there is a support structure used, remove it as soon as possible after taking down the print. It will be harder to remove if the filament absorbs moisture.

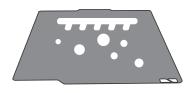

Wash the build plate regularly with hot water and detergent for best adhesion.

Regular maintenance

A 3D printer has a complex mechanical structure and numerous moving parts. Regular maintenance is essential to ensure stable operation and high-quality prints.

Metal Moving Parts:

- Lubricate lead screws, linear rods, guide rails, idler pulleys, and extruder gears regularly to prevent rust.
- Use lubricating oil for guide rails, linear rods, and idler pulleys, and apply lubricating grease to lead screws and extruder gears.

Consumables:

- Inspect plastic and rubber parts, such as filament cutters, for signs of wear, deformation, or aging.
- Replace consumable parts as needed, such as nozzle wipers and PTFE tubes, to maintain print quality.

Other Components:

- · Check camera lenses, fans, and filament sensors for dust or debris.
- Clean fans regularly; gently clean camera lenses using a microfiber cloth dipped in isopropyl or dehydrated alcohol for optimal clarity.



bambulab.com/support/maintenance

Please refer to the "Regular Maintenance Recommendations" section on our wiki for more information.

Item			Specification
	Printing Technology		Fused Deposition Modeling
	Body	Build Volume (W*D*H)	340*320*340 mm ³
		Chassis	Aluminum and Steel
		Outer Frame	Plastic and Glass
	Physical	Physical Dimensions	492*514*626 mm ³
	Dimensions	Net Weight	30 kg
	Toolhead	Extruder Gear	Hardened Steel
		Nozzle	Hardened Steel
		Max Nozzle Temperature	350 ℃
		Included Nozzle Diameter	0.4 mm
		Supported Nozzle Diameter	0.2 mm, 0.4 mm, 0.6 mm, 0.8 mm
		Filament Cutter	Built-in
		Filament Diameter	1.75 mm
		Extruder Motor	Bambu Lab High-precision Permanent Magnet Synchronous Motor
	Heatbed	Build Plate Material	Flexible Steel Plate
Printer		Included Build Plate Type	Textured PEI Plate
		Supported Build Plate Type	Textured PEI plate, Smooth PEI Plate
		Max Heatbed Temperature	120 °C
	Speed	Max Speed of Toolhead	1000 mm/s
		Max Acceleration of Toolhead	20,000 mm/s ²
		Max Flow for Hotend (Standard Flow Hotend)	40 mm³/s (Test parameters: 250 mm round model with a single outer wall; Bambu Lab ABS; 280 °C printing temperature)
	Chamber	Active Chamber Heating	Supported
	Temperature Control	Max Temperature	65 °C
	Air Purification	Pre-filter Grade	G3
		HEPA Filter Grade	H12
		Activated Carbon Filter Type	Granulated Coconut Shell
		VOC Filtration	Superior
		Particulate Matter Filtration	Supported

		Part Cooling Fan	Closed Loop Control	
	Cooling	Cooling Fan for Hotend	Closed Loop Control	
		Main Control Board Fan	Closed Loop Control	
		Chamber Exhaust Fan	Closed Loop Control	
		Chamber Heat Circulation Fan	Closed Loop Control	
		Auxiliary Part Cooling Fan	Closed Loop Control	
	Filament Supported	PLA, PETG, TPU, PVA, BVOH, ABS, ASA, PC, PA, PET; Carbon/Glass Fiber Reinforced PLA, PETG, PA, PET, PC, ABS, ASA, PPA, PPS, PPS		
		Live View Camera	Built-in; 1920*1080	
		Toolhead Camera	Built-in; 1600*1200	
	Sensor	Door Sensor	Supported	
		Filament Run Out Sensor	Supported	
		Filament Tangle Sensor	Supported	
		Filament Odometry	Supported with AMS	
Printer		Power Loss Recovery	Supported	
	Electrical	Voltage	100-120 VAC / 200-240 VAC, 50/60 Hz	
	Requirements	Max Power ¹	2050 W@220 V / 1170 W@110 V	
	Working Temperature		10 °C −30 °C	
	Electronics	Touchscreen	5-inch 720*1280 Touchscreen	
		Storage	Built-in 8 GB EMMC and USB Port	
		Control Interface	Touchscreen, mobile App, PC App	
		Motion Controller	Dual-core Cortex-M4 and Single-core Cortex-M7	
		Application Processor	Quad-core 1.5 GHz ARM A7	
		Neural Processing Unit	2 TOPS	
	Software	Slicer	Bambu Studio Supports third-party slicers which export standard G-code, such as Super Slicer, PrusaSlicer and Cura, but certain advanced features may not be supported.	

	Software	Supported Operating System	MacOS, Windows, Linux
	Network Control	Ethernet	Not Available
		Wireless Network	Wi-Fi
		Network Kill Switch	Not Available
		Removable Network Module	Not Available
Printer		802.1X Network Access Control	Not Available
	Wi-Fi	Operating Frequency	2412-2472 MHz (CE/FCC), 2400-2483.5 MHz (SRRC) 5150-5850 MHz
		Wi-Fi Transmitter Power (EIRP)	2.4 GHz: <23 dBm (FCC); <20 dBm (CE/SRRC/MIC) 5 GHz Band1/2: <23 dBm (FCC/CE/SRRC/MIC) 5 GHz Band3: <30 dBm (CE); <24 dBm (FCC) 5 GHz Band4: <23 dBm (FCC/SRRC); <14 dBm (CE)
		Wi-Fi Protocol	IEEE 802.11 a/b/g/n
		Dimensions	372*280*226 mm ³
	Body	Net Weight	2.5 kg
		Housing Material	ABS/PC
	Printing	Filament Supported	PLA, PETG, ABS, ASA, PET, PA, PC, PVA (dried), BVOH (dried), PP, POM, HIPS, Bambu PLA-CF/PAHT- CF/PETG-CF/Support for PLA/PETG, and TPU for AMS
		Filament Not Supported	TPE, generic TPU, PVA (damp), BVOH (damp), Bambu PET-CF/TPU 95A, and other filament that contains carbon fiber or glass fiber
AMS 2 Pro		Filament Diameter	1.75 mm
		Spool Dimension	Width: 50 mm-68 mm Diameter: 197 mm-202 mm
		RFID Identification	Supported
	Drying	Highest Temperature	65 ℃
		Filament Supported ²	PLA, PETG, Support for PLA/PETG, ABS*, ASA*, PET*, PA*, PC*, PVA*, BVOH *, PP, POM*, HIPS*, Bambu PLA-CF*/ PAHT-CF*/ PETG-CF*, and TPU for AMS*
		Active Moisture Discharge	Supported
		Sealed Storage	Supported

AMS 2 Pro	Drying	Temperature and Humidity Detection and Maintenance	Supported. Real-time temperature and humidity can be displayed on the screen, Bambu Studio, and Bambu Handy.
	Power	Input	24 V 4 A

- 1. To ensure the heatbed quickly reaches the needed temperature, the printer will maintain maximum power for about 3 minutes.
- 2. Filaments marked with "*" require higher drying temperature. The AMS 2 Pro cannot dry them completely. If you want better drying performance for these filaments, we recommend purchasing an AMS HT.

Technical Support

If you need technical support, please follow either of the following methods:

Method 1: Get in touch by using the Contact Us button in our Support Center. bambulab.com/support



Method 2: Create a support ticket on Bambu Handy, from the Support Center section.



You can also visit the Bambu Lab Wiki for more tutorials and maintenance guidance.

wiki.bambulab.com/home



