

## OKY3397

**Product Name:**Coin Cell Battery Holder CR2032 Battery Holder For Lilypad

**Product Module:** OKY3397

### Product Description:

1. Chip-tune playing t-shirt is really cool at the party, but at some point you need to turn it off. And yes, you could just pull the battery, or maybe you've even sewn a slide switch in-line. Wouldn't it be nice if there was just a switch on the battery? Well look no further.
2. This Coin Cell Battery Holder has a small slide switch installed on the board, in-line with the power so you can shut off your project and save batteries. This slide switch is the same as is found on the slide switch board, so it's not easy to accidentally turn off or on.
3. Just like the original Coin Cell Battery Holder, this simple board holds a 20mm coin cell battery (such as a CR2032) and gives you 4 connection points (two positive and two negative) for sewing into your project.

### Package Included

Packing List	Qty
Coin Cell Battery Holder	1