


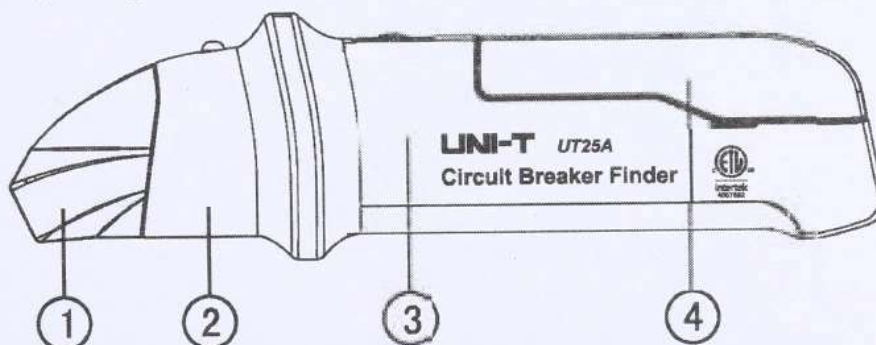

## Receiver


1. NCV indicator light (only for UT25B)
2. LED indicator light with line-tracking
3. ON/OFF switch that can also adjust sensitivity
4. 9VDC, battery type 1604/6F22 (not included)

Attention: The battery information on the battery compartment and the method of opening the battery compartment



## Transmitter

5. GFCI test button
6. Indicator light description
7. LED status indicator

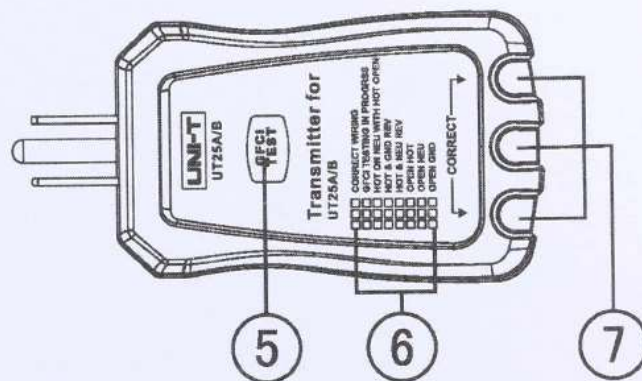

Para mayor información puede consultar el manual de usuario dando clic en el siguiente enlace:  
<https://meters.uni-trend.com/download/ut25a-b-user-manual/?wpdmdl=11432&refresh=62faaa44c1ff81660594756>